

Zeria

EDA-Z1000

Radio Fire Alarm System

Operation Manual



Electro-Detectors Ltd.

Electro House, Edinburgh Way
Harlow, Essex, CM20 2EG UK

Tel: 01279 635668. Fax 01279 450185

Email: eda@electrodetectors.co.uk

Web: www.electrodetectors.co.uk



Please note: No operator serviceable parts are contained within this panel. Always refer to a qualified technician for parts and servicing.

This manual should be provided to the site's nominated 'responsible person' and left on the premises for easy reference.



Revision History

Manual Version	Author	Software Version	Date	Description
V1.00	DR	0.08	01-10-05	First Release
V1.01	DR	0.10	01-11-05	Sounder Repeater Added to System, Access code override function and ability to view access codes, re-program devices to factory settings, re-program unique Id. Antenna monitoring configuration added.
V1.02	DR	0.10	22-12-05	Must reset booster panel to ensure memory cleared. All other devices should also be reset on power up. Operation of fire relays when silence / reset pressed
V1.03	SM	0.15	13-06-06	New features for disabling faults and Double knock functions.
V1.04	SM	1.01	14-03-07	New menu structure, Survey mode, function keys and sounder circuit
V1.05	SM	1.02	18-02-08	HMO software, antenna calibration option, add Text via the panel and contrast settings added
V1.06	PP	1.06	02-02-10	View Test Zones added



Contents / Index

- 1.0 Introduction
- 2.0 Front Panel Display and Keys
- 3.0 User Operations
 - 3.1 System Normal
 - 3.2 Fault Conditions
 - 3.3 To Silence a Fault
 - 3.4 To Reset a Fault
 - 3.5 Alarm Condition
 - 3.6 To Silence Sounders
 - 3.7 To Re-sound the Sounders
 - 3.8 To Reset an Alarm
 - 3.9 Menu Navigation
 - 3.10 To Change Date and Time
 - 3.11 To Isolate a Zone
 - 3.12 To Isolate a Device
 - 3.13 To Enable a Zone
 - 3.14 To Enable a Device
 - 3.15 View System History of Events
- 4.0 Advanced User Operations
 - 4.1 General
 - 4.2 To View Access Codes
 - 4.3 Changing Access Codes
 - 4.4 To Select a Test Mode
 - 4.5 To Disable a Test Mode
 - 4.6 To View Zones in Test



1. Introduction

Electro Detectors has been manufacturing radio fire alarm systems for over 16 years and has now complemented its range of products with a smaller purpose built control panel, the Zerio system. It has been designed for smaller systems and is capable of handling 99 devices in 8 zones. Typical installations could be small offices, private houses, HMO's, guest houses and small hotels.

The system has been designed to allow very simple set up with most operations being automated.

The system is capable of displaying full text and having sophisticated cause and effect programming.

The panel requires a single 2.8Ahr Lead Acid battery to achieve 48 hours standby. Two 6V 4Ahr batteries connected in series will provide a 72- hour HMO compliant standby.

Devices for the system are visually the same as the standard Millennium devices but are labelled differently with a yellow label. In order to maintain compatibility, the Zerio panel can re-program a Millennium device to operate with the Zerio format, providing the devices are version V1.6 or later.

A memory module is plugged into the processor board. This stores a copy of any set-up information including device text and cause and effects. This can be used as a means of swapping data between panels should the need arise.

In order to log devices and program devices into the system, they need to be connected via a supplied programming lead. The system also stores the data programmed into each device allowing replacement devices to be easily cloned onto the system.


Prior to installation, the building where the system is to be installed must be surveyed to ensure that each device to be fitted has a good radio communication path to the control panel. If this is not done correctly the system will operate unreliably. Having successfully completed this survey, when installing the devices, they must be positioned as per the survey. Installing a device only a few tens of centimetres away from the surveyed position can reduce the signal strength significantly, especially if any metal work is contained in the ceiling above the new position (e.g. air-conditioning ducting).

When manufactured each device is programmed with a unique ID. Whenever a device transmits a message this ID is included as part of the message. Also included in the message is the status (i.e. alarm condition, unit removal, low battery etc). The amount of smoke inside the head at the time of the transmission is included as part of the message. Even if there is no change in status, the device will transmit an 'I'm OK' verify message approximately every 3 minutes. If these transmissions are not received from the device within the verify period (typically 120 minutes) then a 'Verify Fail' fault is generated.



2. Front Panel Display and Keys

Figure 1.1 Front Panel Display and Buttons

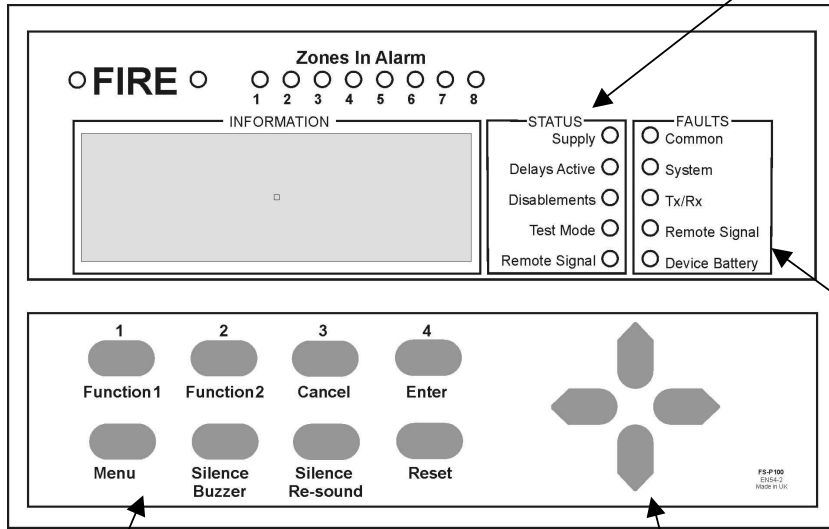

Status

Supply – This LED will be illuminated when mains is present

Delays Active – Illuminated if a fire condition exists and delays are programmed.

Disables–Illuminated if any devices or zones are isolated.

Test Mode-Illuminated if any test modes are operational. The buzzer will pulse and can be silenced by pressing ‘Silence Buzzer’

Remote Signal-Not implemented.

Faults

Common – Device or panel has a fault – see the main display for details.

System – Not implemented.

Tx/Rx – Not implemented.

Remote Signal – Not implemented.

Device Battery – Not implemented.

Keys

Function 1 & 2 – Programmable for use as Evacuate and Alert functions.

Cancel - Used to return to the main screen from a menu or to return to the menu from a programming screen.

Enter - This is used to accept information programmed into the panel.

Menu – Press to enter the menu system. If held down for longer than 4 seconds all LED’s will flash (lamp test).

Silence Buzzer- Silences the buzzer for all currently displayed faults (fault acknowledgement).

Silence / Re-Sound - If the panel is in a fire condition this will silence the sounders. If the sounders are already silenced and the panel not reset, pressing this button will re-sound the sounders using the preconfigured re-sound tone.

Reset – Resets the panel from an alarm condition. Note that the system must be silenced before it can be reset from a fire condition.

Navigation Keys

Used to navigate through the menu structure and programming / status screens.

In a multiple fault or alarm condition, the up and down arrow keys allow the user to scroll through all the current events. The display will also scroll automatically every 6 seconds.



3. User Operation

Please note: No operator serviceable parts are contained within this panel. Always refer to a qualified technician for parts and servicing.

3.1 System Normal

In normal operation the screen will show either the date and time, contact details or alternate the two depending on the customers requested settings. Also a single green “Supply” LED will be illuminated.

A.N.Other Fire 01279 450185 11:02:31	Thursday 25-05-2006 11:02:31
--	--

3.2 Fault Conditions

If a fault occurs, a message describing the fault will be displayed and the internal buzzer will sound. This will detail the device type, a description of the fault, the unit / device number and a location description (if programmed). The description has a maximum length of 59 characters and will scroll across the screen. Appropriate action should be taken to remedy the fault as this may affect the operation of the fire alarm system. If in doubt, the system maintenance company should be contacted.

```

001 SMOKE/SOUNDER 05
UNIT REMOVAL
1st Floor Garden Entr
```

If more than one fault exist on the system they will scroll round every 5 seconds. Pressing the cursor keys will automatically move to the previous or next fault.

3.3 To Silence a Fault

Press ‘Silence Buzzer’.

Once the ‘Silence buzzer’ button has been pressed the panel assumes that the fault has been acknowledged and does not resound the buzzer. If a different fault occurs, the panel will sound the buzzer until the new fault has been acknowledged.

3.4 To Reset a Fault

Assuming the fault has been rectified, pressing reset will reset the system and the system normal screen will be displayed. If the fault is still present or re-occurs it will be re-displayed (this could take some time depending on the type of fault).

For a list of faults, their most common causes and ways to rectify faults see Appendix 2. Note that all faults will continue to be displayed on the panel until the system is reset, even if the fault condition has been rectified.

3.5 Alarm Conditions

If the Alarm sounds the premises should be evacuated. A screen will be displayed similar to below. The Fire LEDs will flash and the appropriate zone LED(s) will flash. The first line details the first zone that has been activated and the last zone to activate. The second line provides a count of all zones in alarm. The third line details the event number, device type and number. The last line details the text location of the device in alarm. If the description is longer than 20 characters it will scroll across the screen. If more than 1 event occurs, the bottom two lines will scroll.

```

First ZN:1 Last ZN:1
Zones in alarm:1
001 CALLPOINT 06
First Floor Next to W
```



Note: It is possible to configure the system to silence, re-set and re-sound without the need to enter a valid user code by setting 'Code Protect' to off in the panel configuration options. Please be aware that turning code protect off may mean that the installation contravenes relevant standards.

3.6 To Silence the Alarm.

When it is certain that it is safe to return to the building the 'Silence / Re-Sound' button should be pressed. The user will then be prompted to enter a valid user password. Up to 30 seconds should be allowed for all sounders to silence with a radio system. If the device is still in an alarm condition the sounders will not sound again unless another device goes into alarm. The sounders will automatically silence after 30 minutes.

3.7 To Re-Sound the Sounders

There may be times when the sounders have been mistakenly silenced - for example if the alarm was genuine but someone mistakenly pressed silence. To do this press the 'Silence / Resound' button. To prevent the user from inadvertently silencing and re-sounding the system there is a programmable lock out time during which this button is inactive.

3.8 To Reset the Alarm

Assuming the reason for the alarm condition has been investigated, pressing 'Reset' will return the system to its normal operation screen. The user will need to enter a valid password. The screen will display any faults that were detailed prior to the alarm condition or any new fault that occurred during the alarm condition.

3.9 Menu Navigation

To enter the menu system, press 'MENU' and enter a valid password. 'Main Menu' will appear. To scroll through the menu the '↑' or '↓' keys should be pressed. In order to select a menu option the '→' key should be pressed. To return to the previous menu screen from a sub-menu the '←' should be pressed. Pressing 'Cancel' will return to the system screen where any faults or alarms will be displayed if present. If a sub-menu is selected the 'cancel' button should be pressed to return to the previous menu.

```

Main Menu
1→Setup
2 Disable/Enable
3 View Events

```

3.10 Changing the system date and time

To set the date and time, press 'MENU', enter the correct password, select '1-Setup', '1- Time & Date'. Use the ←and→ keys to navigate to the value to change and the ↑ or ↓ keys to select the desired value. Press 'ENTER' to accept or 'CANCEL' to exit. The Zerio panel automatically adjusts the clock for daylight savings.

```

Time: 12:29:00
Date: 01-01-2005

ENTER to save

```

3.11 Isolating a Zone

Once a zone is isolated it will not display any fault or alarm events for devices located in this zone. Press 'MENU', enter the correct password, select '2-Disable/Enable', select '1-Disable', select '1-Disable Zone'. Using the ↑ or ↓ keys, select the zone number to be disabled and press 'ENTER'. Select the timeout (in hours) and press 'ENTER'. After this time has expired the isolated zone(s) will be automatically enabled. Press 'ENTER' to confirm. The 'Disablesments' LED will be illuminated. If more zones need to be isolated press 'ENTER' or press 'CANCEL' to exit.

```

Select Zone 01;

ENTER to continue

```

```

Timeout (hours) 01;

ENTER to continue

```

```


Press ENTER to
Disable Zone 01

```





3.12 To Isolate a Device

Once a device is isolated it will not display any fault or alarm event. Press 'MENU' and enter a valid password. Select '2-Disable/Enable', select '1-Disable', select '2-Disable Device'. Using the ↑ or ↓ keys select the device number to be disabled and press 'ENTER'. Select the timeout (in hours) and press 'ENTER'. After this time has expired the device that was isolated will automatically be enabled. Assuming the information is correct, press 'ENTER' to isolate the device. The 'Disablesments' LED will be illuminated.

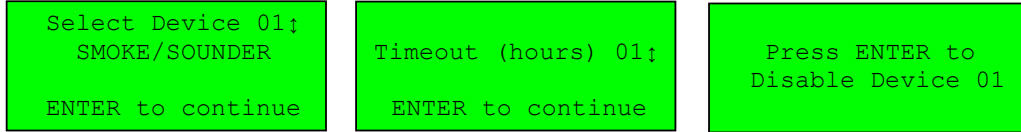


3.13 To Enable a Zone

To enable a previously isolated zone, press 'MENU' and enter a valid password. Select '2-Disable/Enable', select '2-Enable', select '1-Enable Zone'. Using the ↑ or ↓ keys select the zone number to be enabled and press 'ENTER'. To enable more zones press 'ENTER' or 'CANCEL' to exit. If all zones have been enabled 'No Zones to enable' will be displayed and the 'Disablesments' LED will extinguish (assuming that no other 'Disablement' conditions such as isolated devices exist).

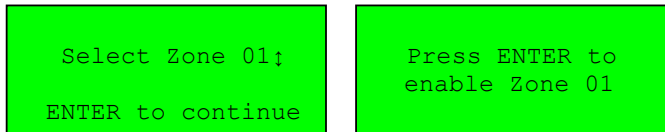


3.14 To Enable a Device

To enable a previously isolated device, press 'MENU' and enter a valid password. Select '2-Disable/Enable', select '2-Enable', select '2-Enable Device'. Using the ↑ or ↓ keys, select the device number to be enabled and press 'ENTER'. To enable more devices press 'ENTER' or 'CANCEL' to exit. If all devices have been enabled 'No Devices to enable' will be displayed and the 'Disablesments' LED will extinguish (assuming that no other 'Disablement' conditions such as isolated zones exist).

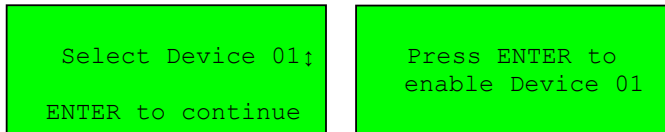

3.15 Viewing Event History

To view a log of historical system events, press 'MENU' followed by a valid password and select '3-Event Log'. A sub menu will appear detailing 'VIEW EVENTS'. Using the cursor keys to select this. The panel stores up to 255 fire or fault events in memory. A description of the fault or fire is recorded together with the date and time of the event. When the log becomes full the oldest entries are automatically removed to make room for new ones. To scroll through the event log use the cursor keys.

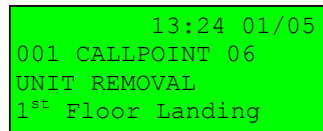



4. Advanced User Operations

Please note: No operator serviceable parts are contained within this panel. Always refer to a qualified technician for parts and servicing.

4.1 General

Assuming the correct password is entered, the user can sign on as an advanced user. This allows some extra functions not available to the basic user. Only people who have been trained in the operation of the system should be allowed access at this level as certain operations of the fire alarm can be disabled (although they will be automatically enabled after a short timeout period)

4.2 To View Access Codes

The access code / password is a 4 digit number with each digit in the range of 1 to 4. To view the current passwords, the following procedure should be followed. Press the 'MENU' button and enter the correct password for an 'Advanced User' The default is 2222. Using the cursor keys, select '1-Setup', select '2-Access Codes' and select '1-View Codes'. A screen, as shown below, will list the passwords for the basic user labelled 'AL1' and the advanced user labelled 'AL2'.




AL1 1111 AL2 2222

CANCEL to exit

4.2 Changing Access Codes

An advanced user can change the password for the basic and advanced user. The password is a 4 digit number with each digit ranging from 1 to 4. To change the password, press the 'MENU' button, select '1-Setup', select '2-Access Codes' and select '2-Change Codes'. Using the cursor keys, select either the 'advanced user' (Access Level 2) or the 'basic user' (Access Level 1) password. Once selected press 'ENTER'. Using the numbered keys enter the current password. Assuming this matches the stored user code you will be prompted to enter the new password and then re-enter the new password to confirm. Press 'ENTER' to save the new password. A message will be displayed indicating that the password is being saved to the SIM and flash memory.

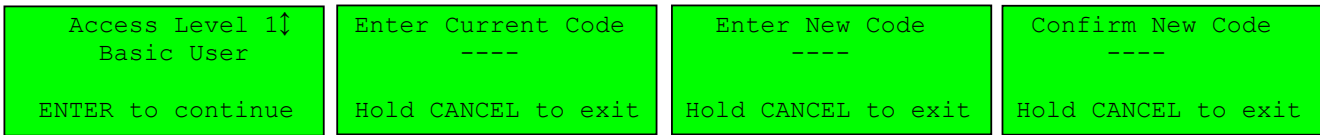

Access Level 1↓
Basic User

ENTER to continue

Enter Current Code

Hold CANCEL to exit

Enter New Code

Hold CANCEL to exit


Confirm New Code

Hold CANCEL to exit

4.3 To Select Test Mode


Test mode is available to an advanced user so that a system can be tested with minimal disruption to the occupants of a building. BS5839 and EN54 specify what tests should be performed at what intervals. Always follow any testing schedule or routine recommended by the system installer. As a rough guide the system should be tested weekly, but sounders only need to be tested every month. The test mode allows various output devices and/or sounders to be disabled.

To select the option press 'MENU' and enter a valid password. Select '4-Test Mode', select '1-System Test' and select '1-Enable Test'. For each device that is to be tested, the zone that the device is located in must be selected by scrolling to the appropriate zone number and pressing the '→'. A '*' will be indicated by the zone for any zones selected. Failure to select the correct zone will mean the system will operate as normal if the device is set into alarm.

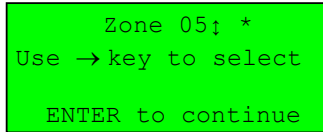

Zone 05; *
Use → key to select

ENTER to continue

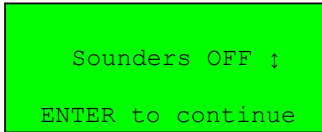

Sounders OFF ↓

ENTER to continue

Having selected the zones that are to be tested press 'Enter'. The operation of the alarm can now be selected.

Sounders

If sounders are not required to sound set 'Sounders' to OFF.

Actuators


If actuators are not required to operate then set 'Actuators' to OFF. Actuators are output devices used to control equipment like magnetic doors, other alarm systems, gas valve shut-offs, air conditioning etc. It would be normal for actuators to be isolated in an alarm test.

**Fire Relay**

If the fire relay inside the panel is required to be disabled this should be set to OFF. This is often used as a way of triggering a link to the fire brigade or to an alarm monitoring station. Always follow the procedure outlined by the system installer.

Timeout

This is the amount of time before the system will automatically exit test mode operation. This should be set slightly longer than the test should take. It can be set in 1 hour intervals and is selected using the cursor keys. A maximum of 48 hours can be set. The user should now press enter to enable the test mode. The 'Test Mode' LED will illuminate.

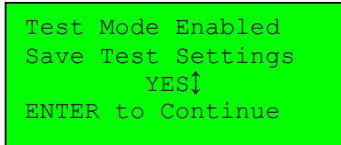

```
Test Mode Enabled
Save Test Settings
  YES↓
ENTER to Continue
```

Once test options have been selected these can now be saved for quick setup in the future. Once the test screen is entered the panel will prompt to use saved settings, if unsure of the saved settings select NO and re-define the test parameters.

Devices that require testing should now be set into a fire condition and the details on the screen checked. Care should be taken to ensure the correct devices are tested as failure to do this could result in all the bells sounding.

Once the tests are complete and the user is satisfied that everything functioned correctly, the test mode should be disabled. If this procedure is forgotten the test mode will automatically time out after the selected period.

4.4 To Disable the Test Mode

Press the 'MENU' button, select '4 -Test Modes' then '2 -Disable Test' Press 'ENTER' to disable test. The 'Test Mode' LED will extinguish.

4.5 To view Zones in Test

Press the 'MENU' button, select '4-Test Modes' then '3-View Test Zones. Use the Up/Down keys to view the Zones that have been put into Test.